
QUICK REFERENCE GUIDE

Jury Deliberation LCD TV (Use of Media Storage Devices)

USE OF USB MEDIA STORAGE DEVICE


The USB port is located on the side panel of the LCD TV.



ACCEPTABLE MEDIA FORMATS:

- The USB flash drive must be formatted as FAT32
- Photos will display only in JPG/JPEG format.
- Music (audio) files must be in WAV format.
- Movies (video and video/audio) files must be presented in MPG format. Note: Drone videos must be converted to MPG format.
- Documents have to be submitted in PDF format.

COMPACT DISCS (CD) AND DVD VIDEOS

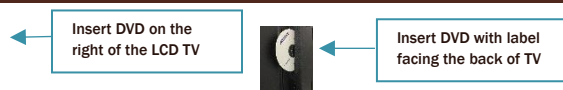


The DVD drive can be used for the following:

- DVD
- Compact discs (CD) Note: (Documents must be in PDF format)

Note: The media formats listed above apply. Blu-Ray discs are not compatible.

INPUT SOURCE

 To switch from DVD to USB, you must change the source input on the remote control, then press the up down arrow to highlight input. Once selected, press ok.



DVD – Select DVD input mode

USB – Select USB storage input